


Wiring 13 Amp Domestic Plug

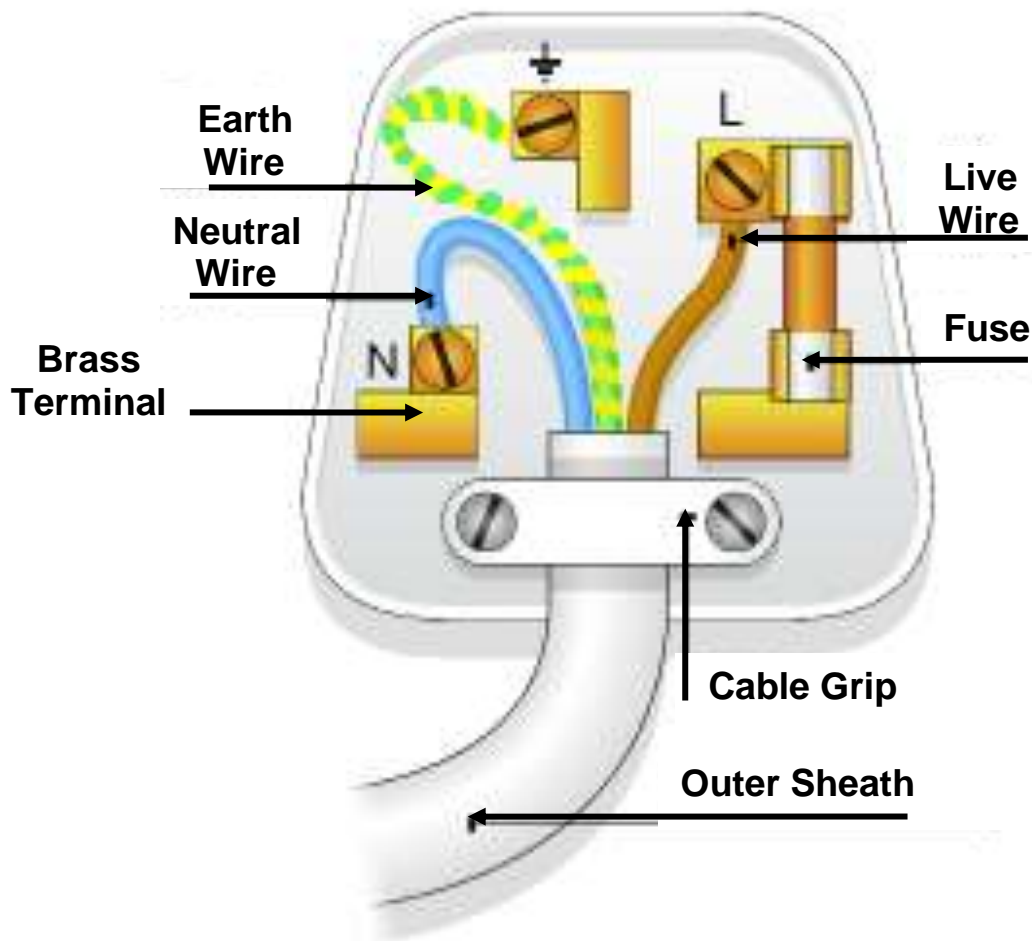

Notes:

1. Ensure wires go to the correct terminals.
2. Ensure conductor is secured in the terminal (2NM approx).
3. Ensure wires are not crossed, twisted or trapped.
4. Ensure all copper strands are inside the brass terminals.
5. Where possible ensure Earth Wire is longer than Live and Neutral wires.
6. Ensure outer sheath is clamped so it can be seen both sides of cable grip.